

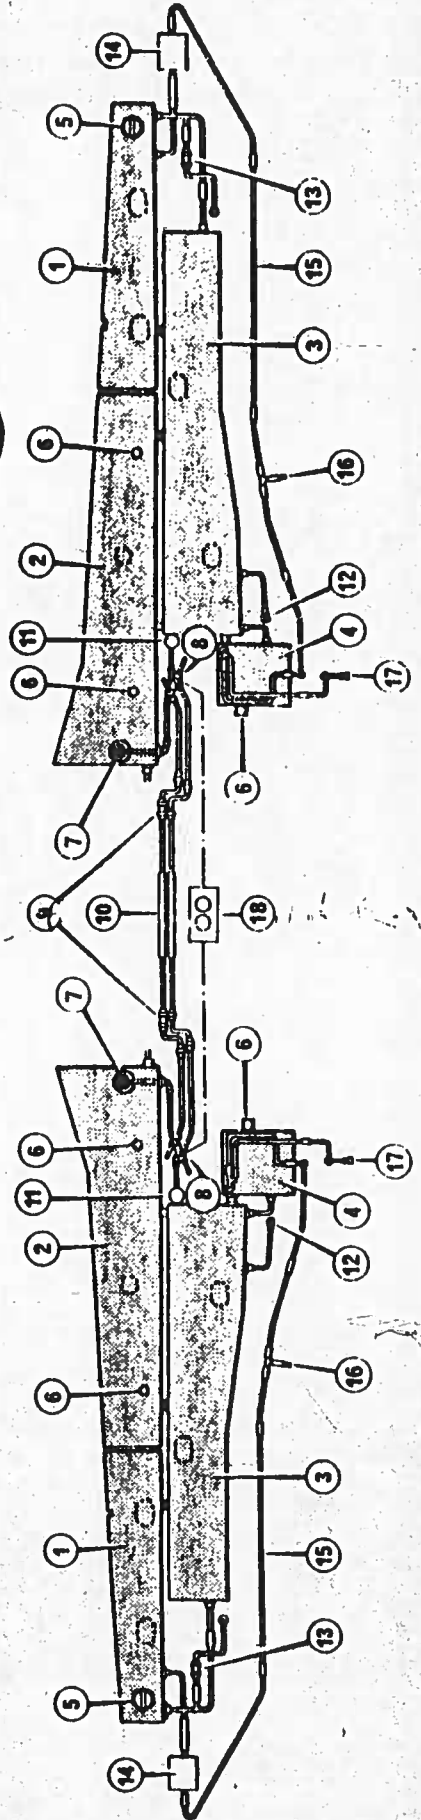


**FUEL SYSTEM**

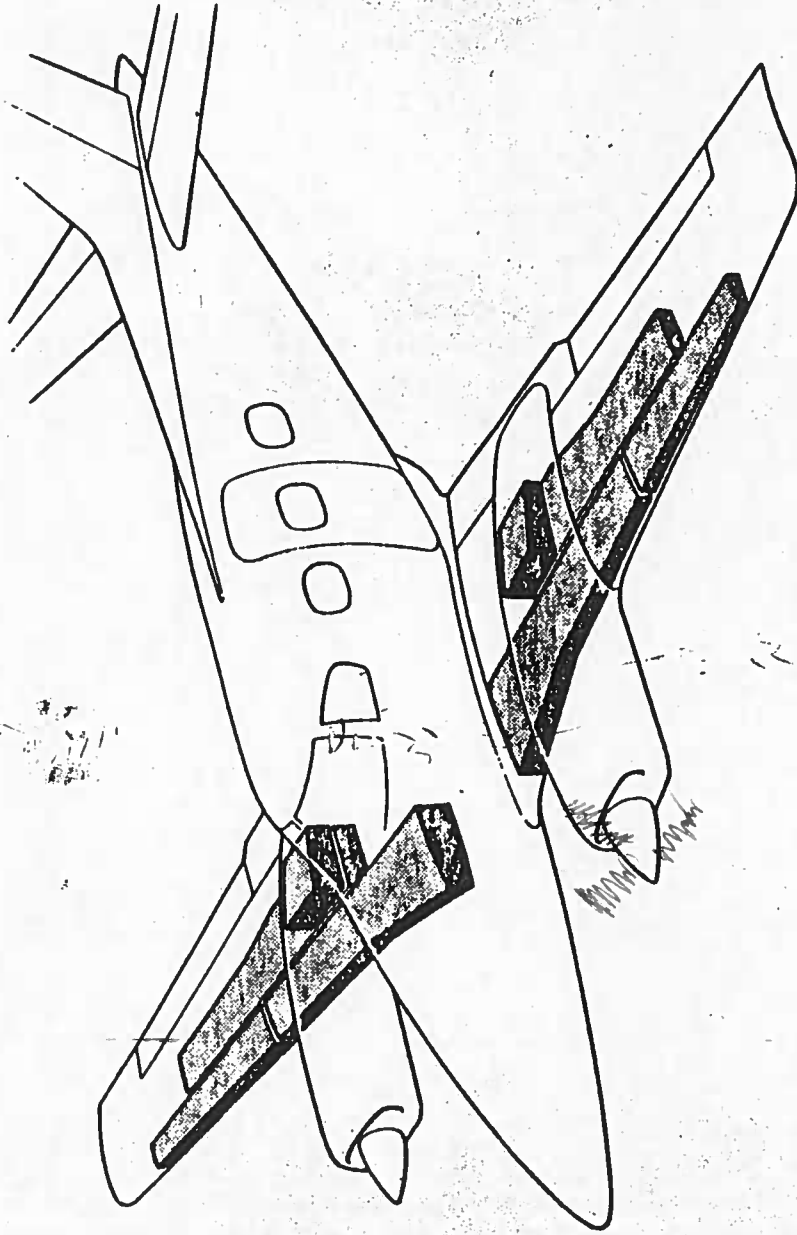


BEECHCRAFT  
DUKE 60 SERIES  
MAINTENANCE MANUAL

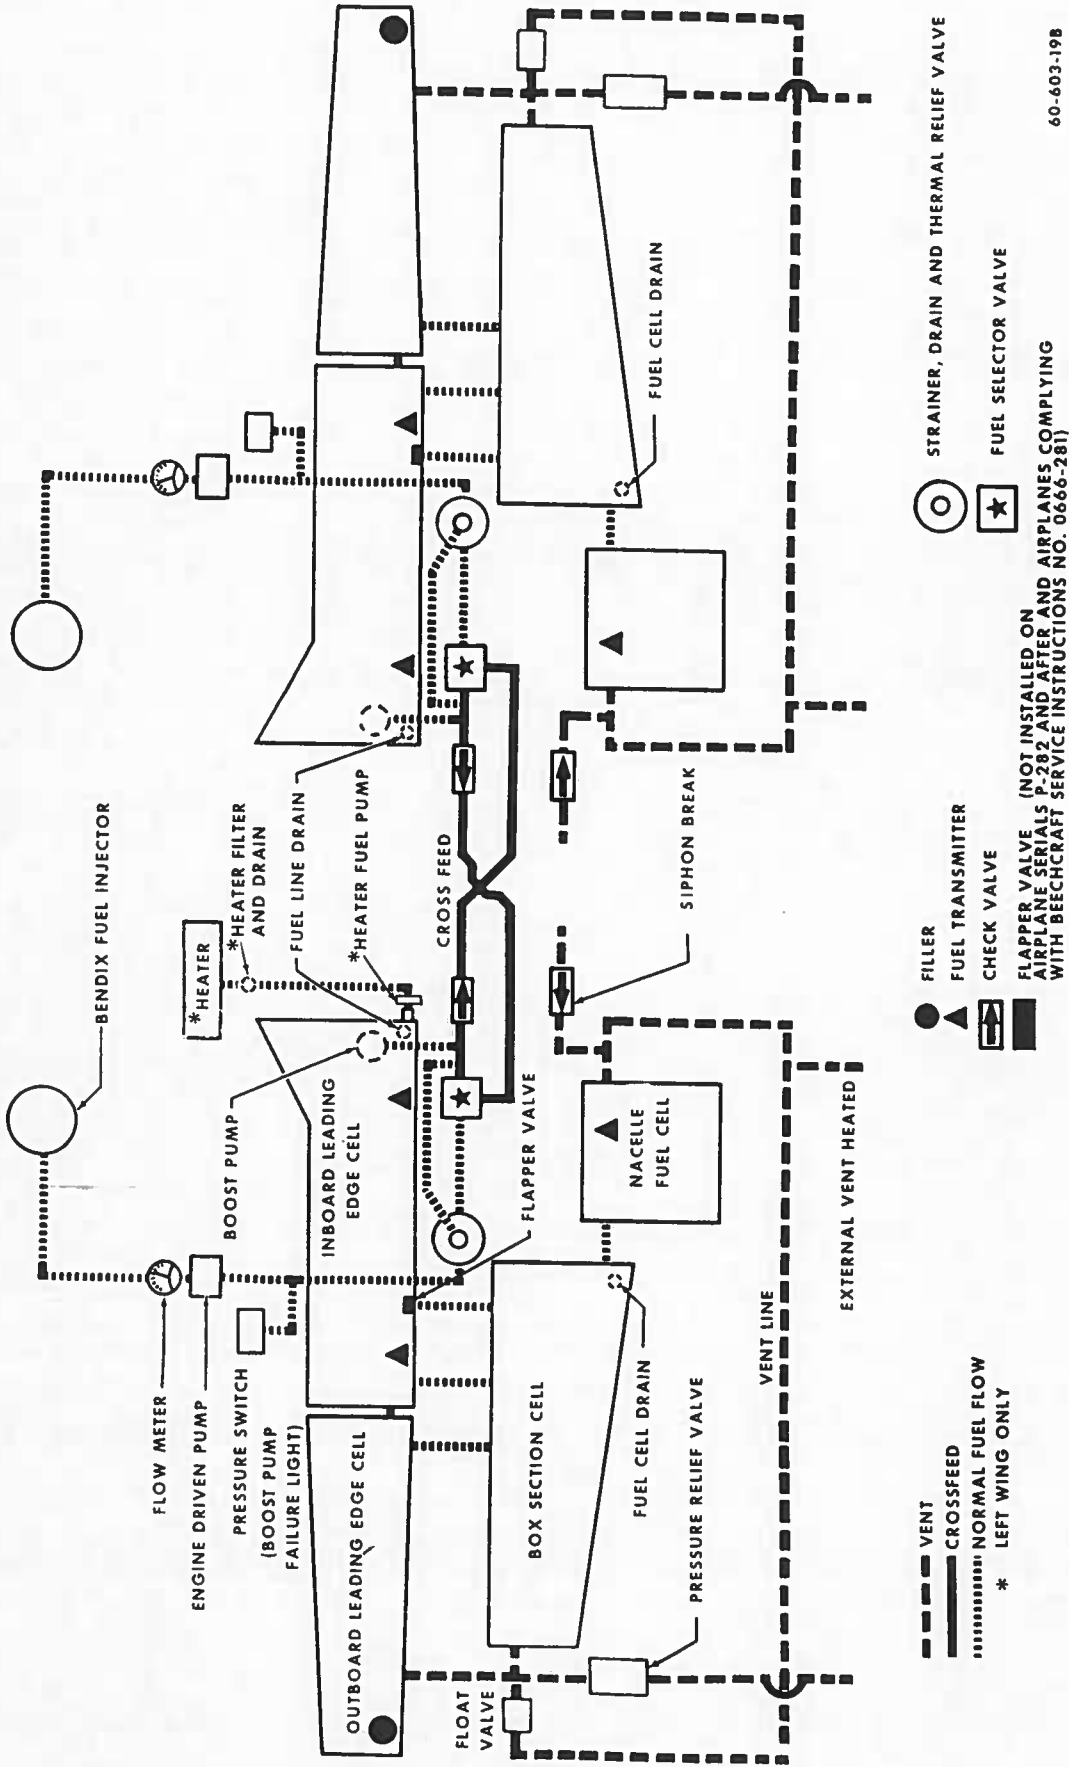

- FILLER
- ▲ FUEL TRANSMITTER
- ▬ CHECK VALVE
- ▬ FLAPPER VALVE (NOT INSTALLED ON AIRPLANE SERIALS P-282 AND AFTER, AND AIRPLANES COMPLYING WITH BEECHCRAFT SERVICE INSTRUCTIONS NO. 0666-281)
- ▬ VENT
- ▬ CROSSFEED
- ▬ NORMAL FUEL FLOW
- \* LEFT WING ONLY
- STRAINER, DRAIN AND THERMAL RELIEF VALVE
- ★ FUEL SELECTOR VALVE


Fuel System Schematic  
Figure 1

60-603-198

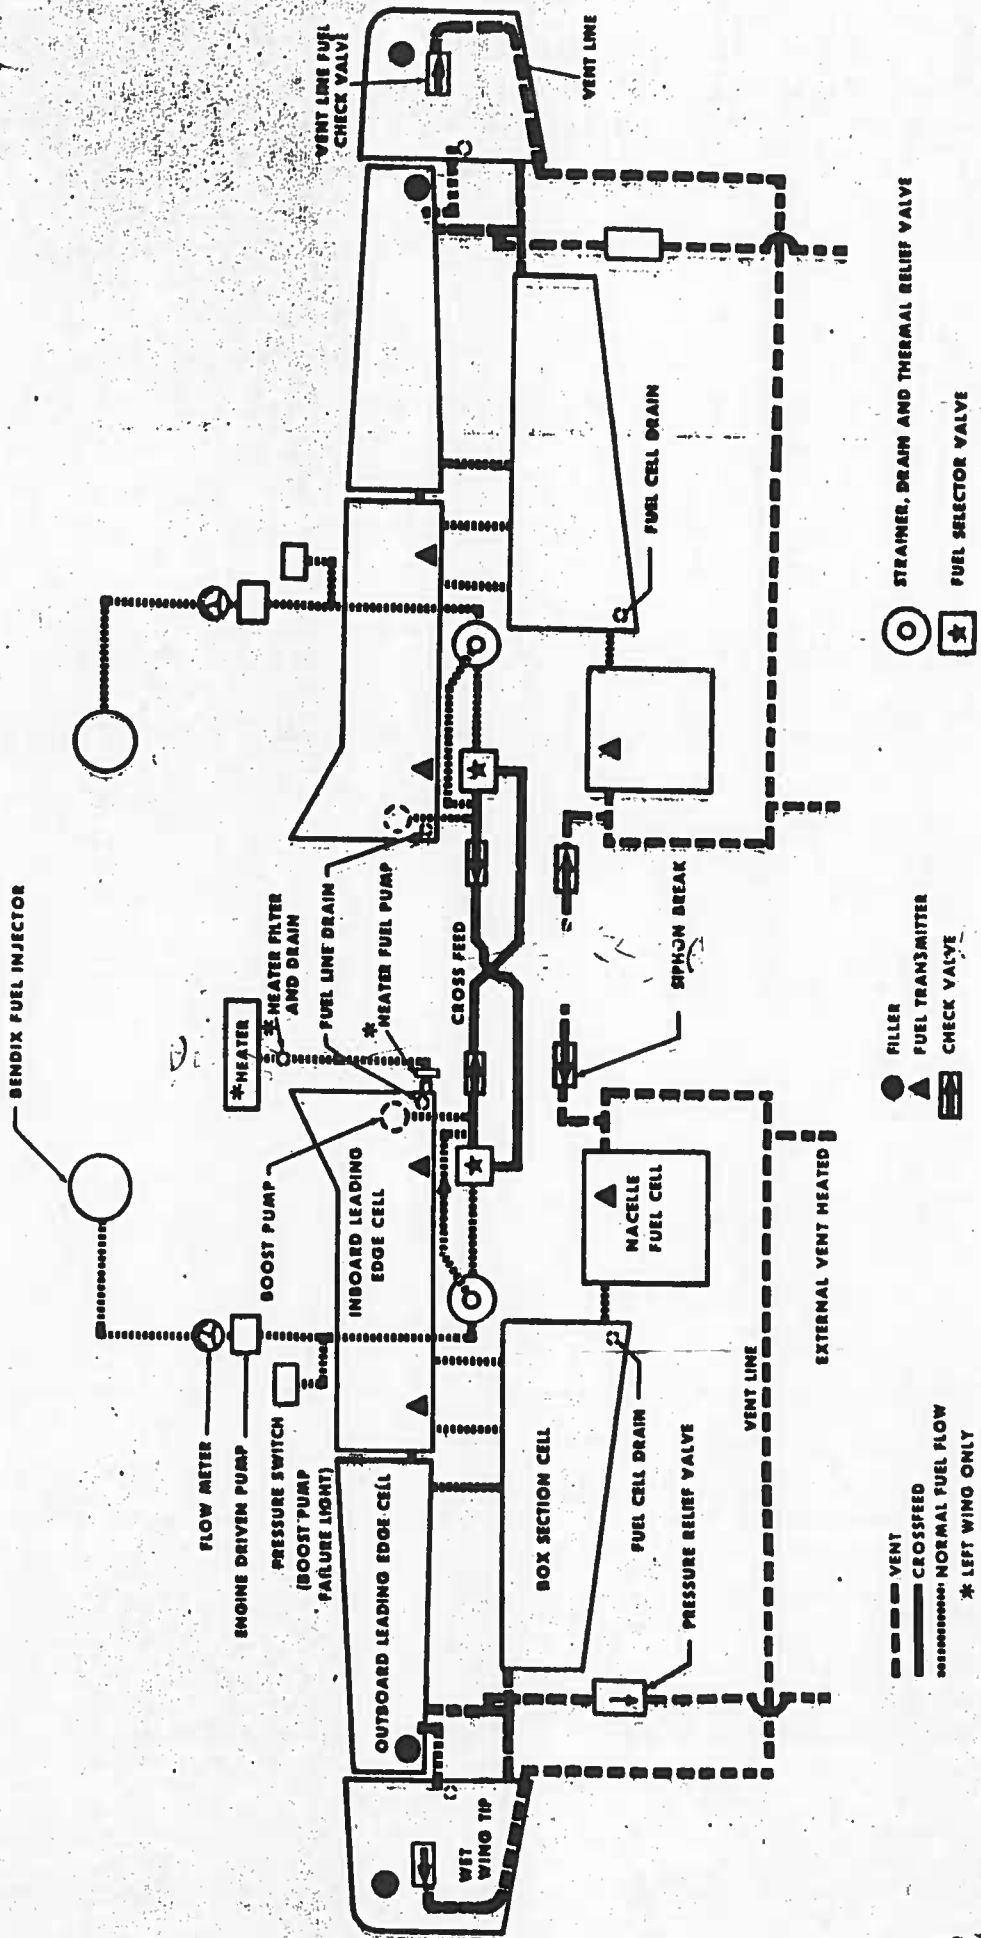


60-603-24

Optional Fuel System Schematic  
(P-346, P-305 and after)  
Figure 2

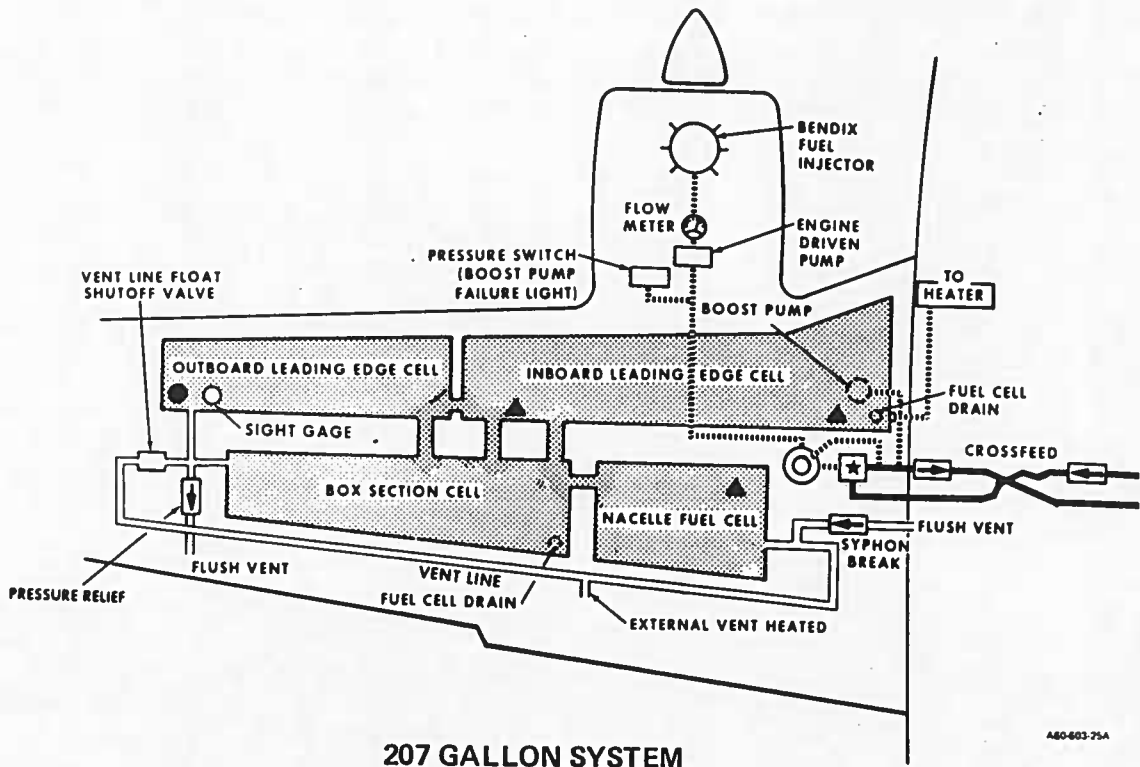

A80-603-75A

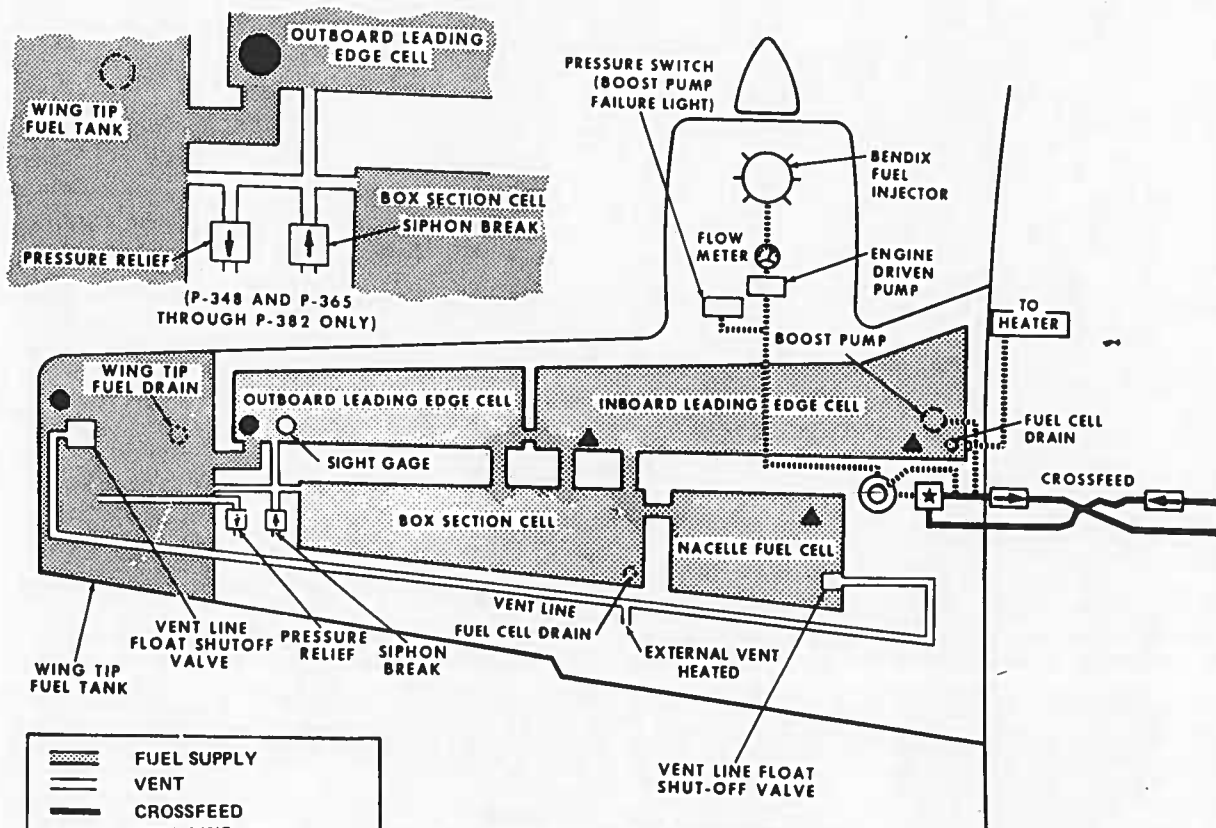

	FUEL SUPPLY
	VENT
	CROSSFEED
	FUEL LINE
	FILLER
	FUEL TRANSMITTER
	CHECK VALVE
	STRAINER, DRAIN, AND THERMAL RELIEF VALVE
	FUEL SELECTOR VALVE

**FUEL SYSTEM SCHEMATICS**