


Figure 5-11. Landing Gear Actuator Assembly

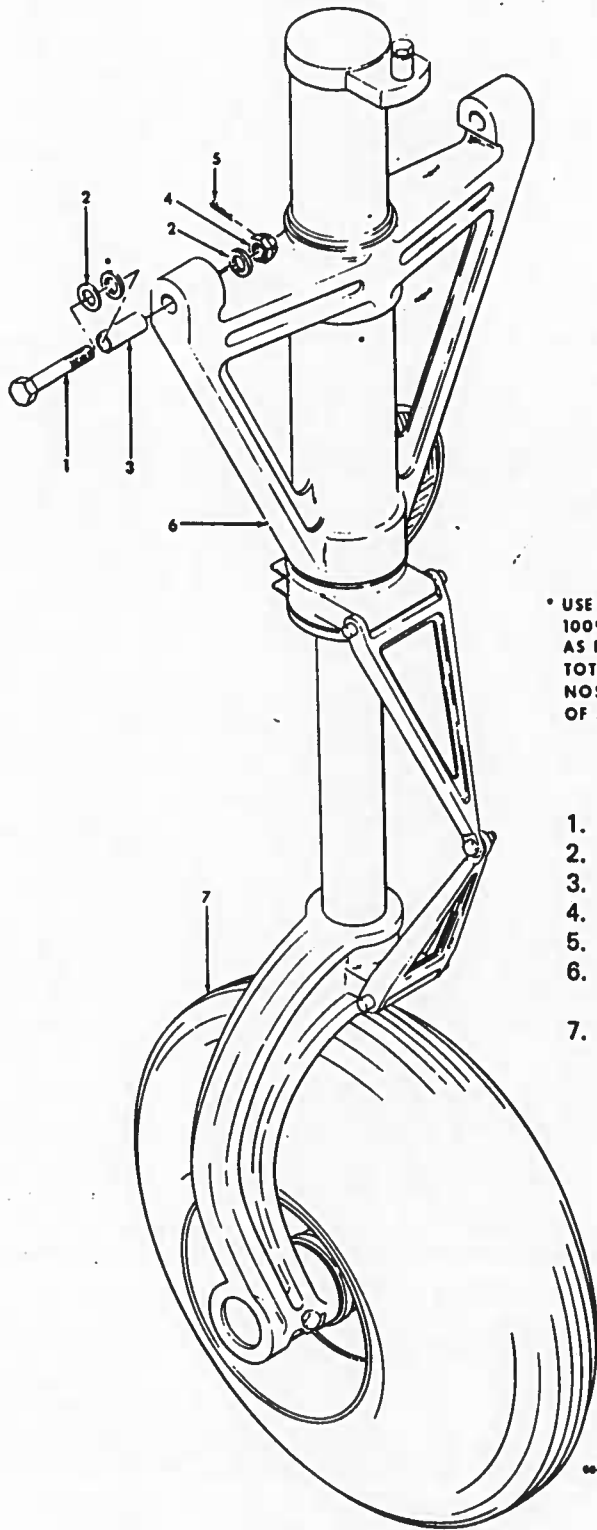


• USE 100951X016YX AND 100951X032YX WASHERS, AS REQUIRED, TO OBTAIN TOTAL END PLAY BETWEEN NOSE GEAR AND SUPPORTS OF .000 TO .016 INCH.

1. Bolt
2. Washer
3. Bushing
4. Nut
5. Cotter pin
6. Nose Landing Gear Assembly
7. Wheel and Tire Assembly

66-700-3


Nose Gear Installation

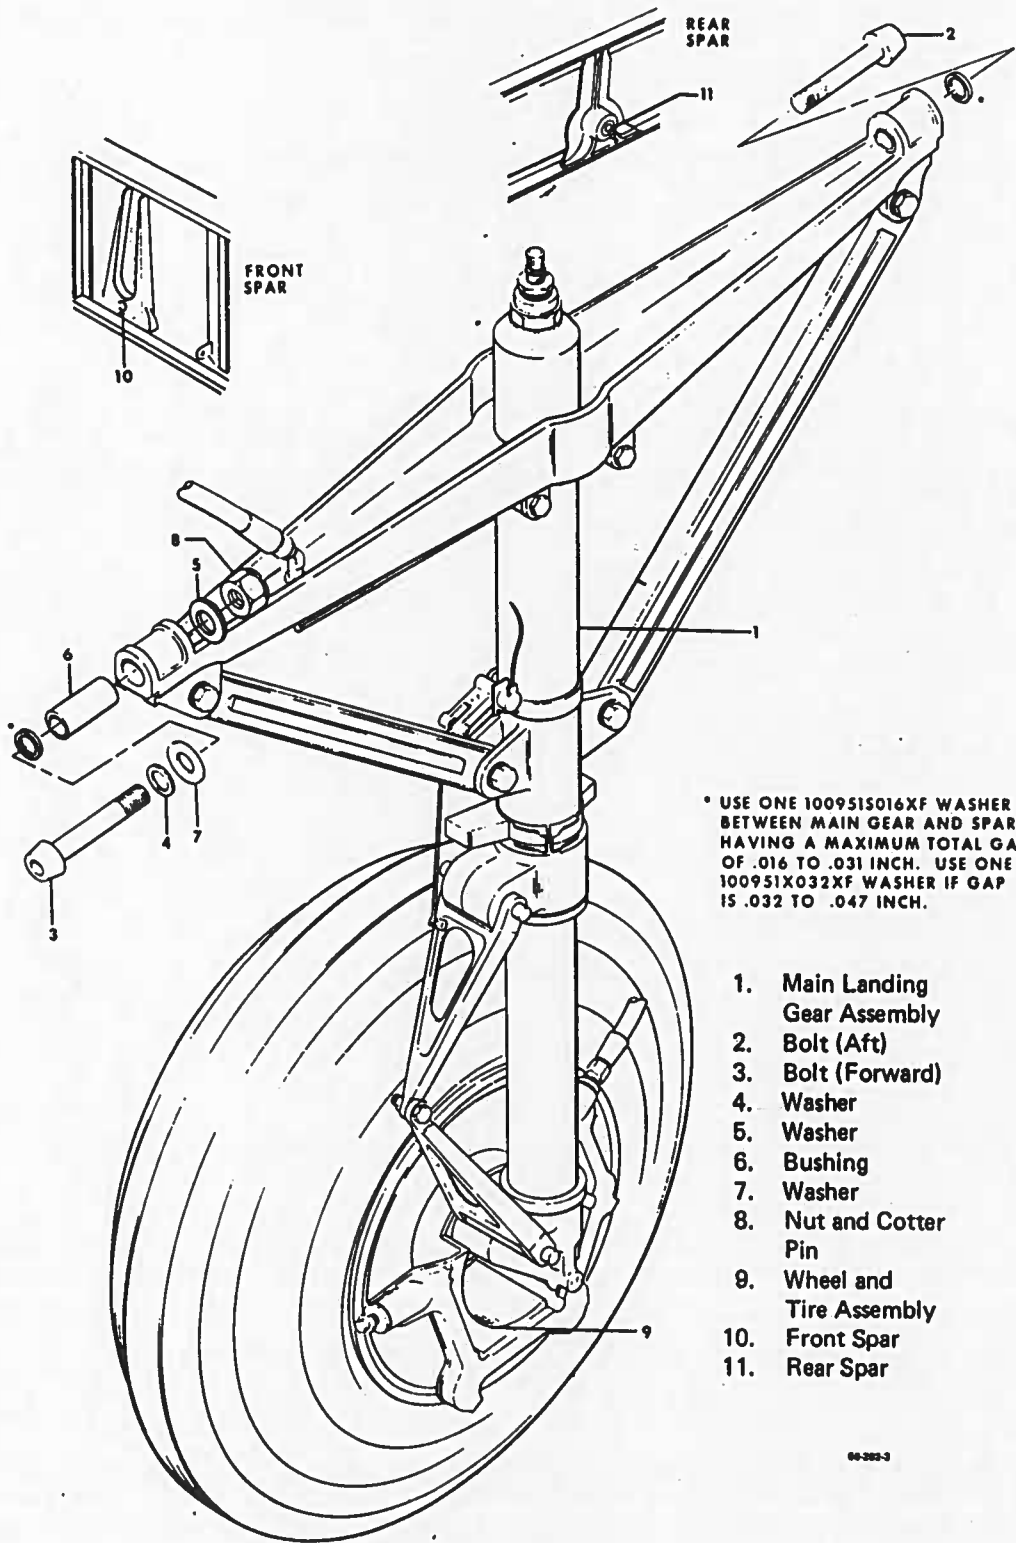

1. Main Landing Gear Assembly
2. Bolt (Aft)
3. Bolt (Forward)
4. Washer
5. Washer
6. Bushing
7. Washer
8. Nut and Cotter Pin
9. Wheel and Tire Assembly
10. Front Spar
11. Rear Spar

66-282-3

Main Gear Installation

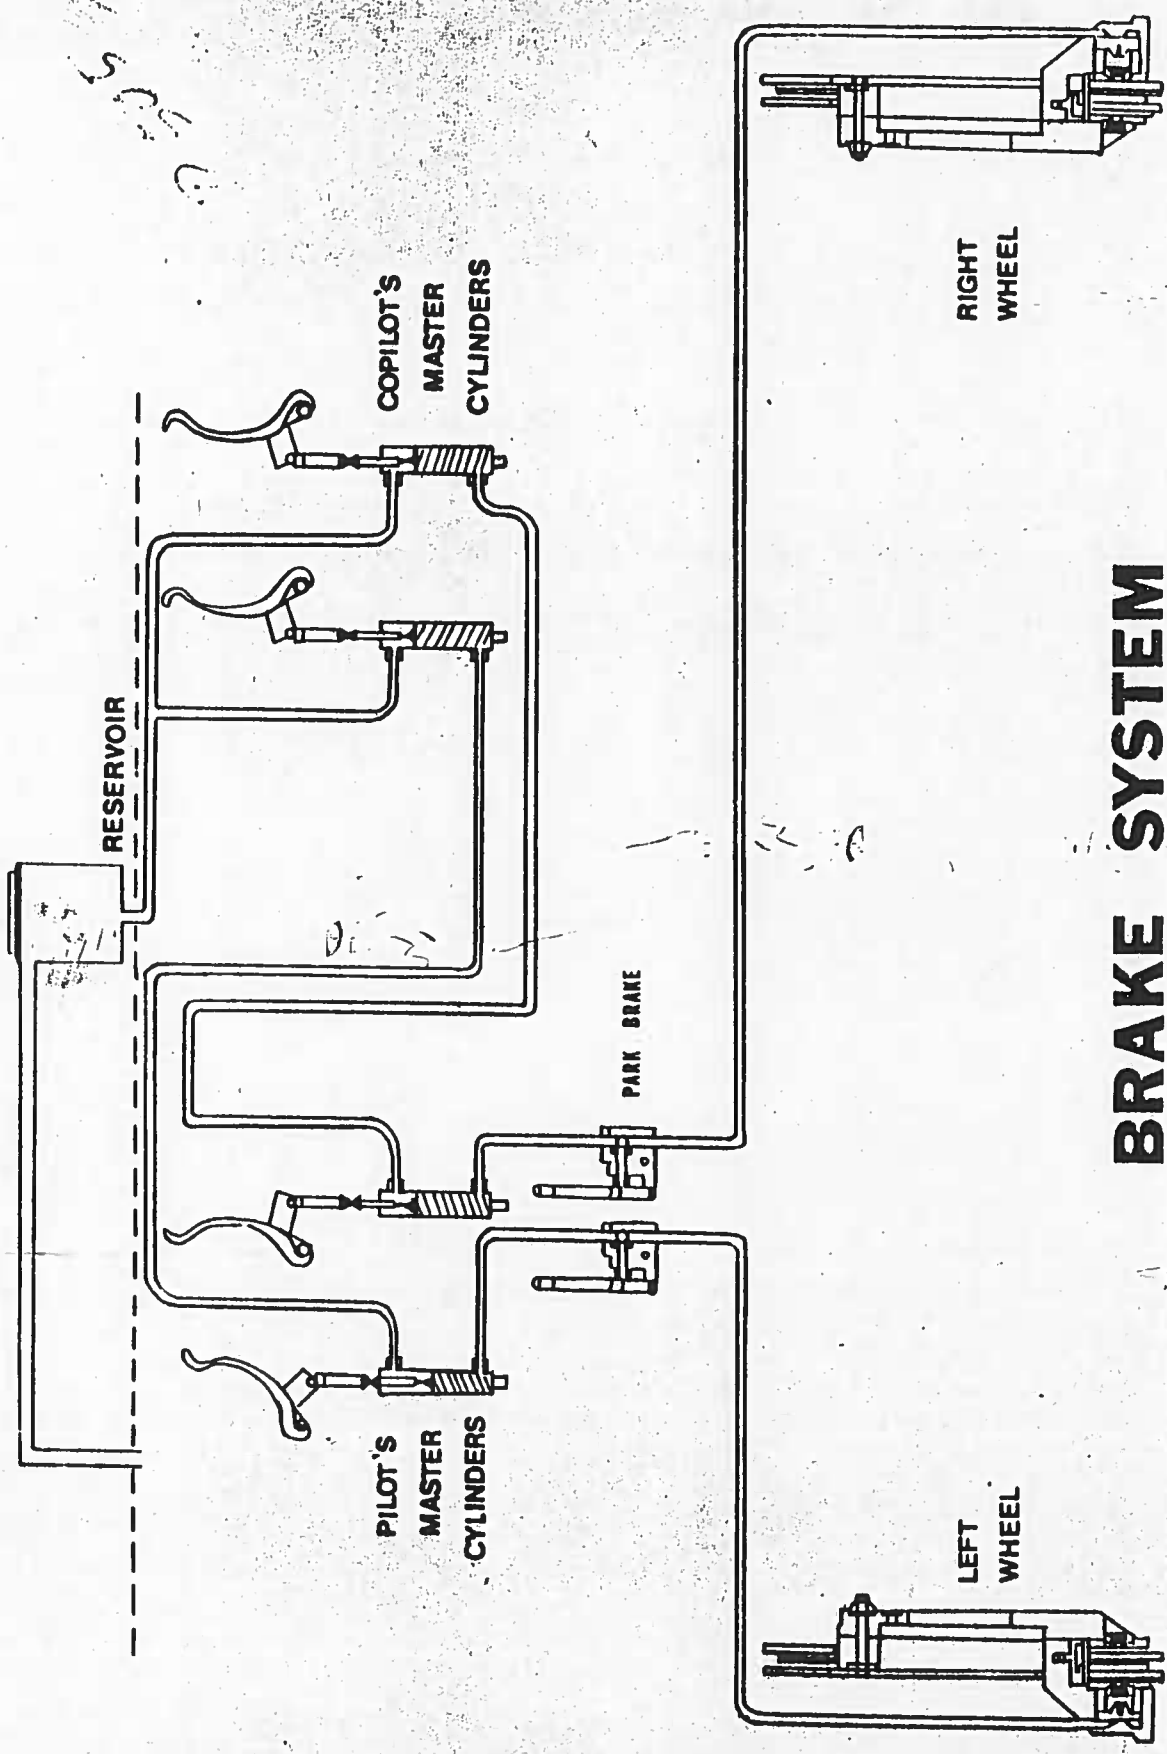

BRAKE SYSTEM